

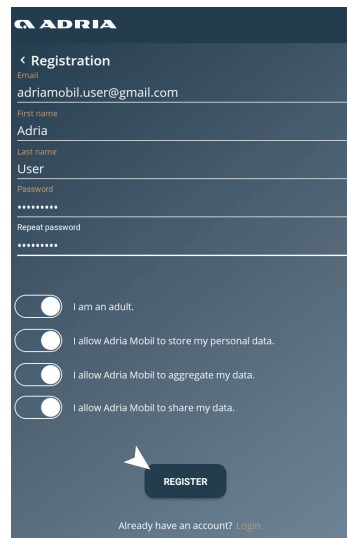
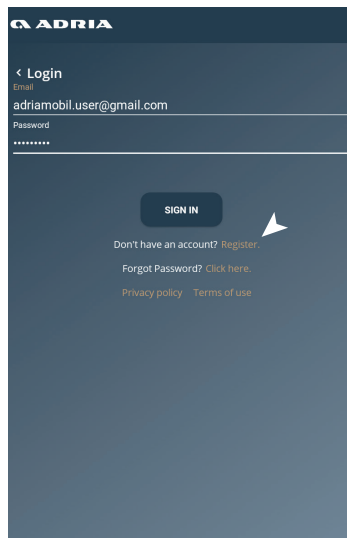


Adria MACH

CONNECTION GUIDE

Please, turn on internet and Bluetooth connection of your smart phone before proceeding.

1 REGISTER, CREATE AN ACCOUNT

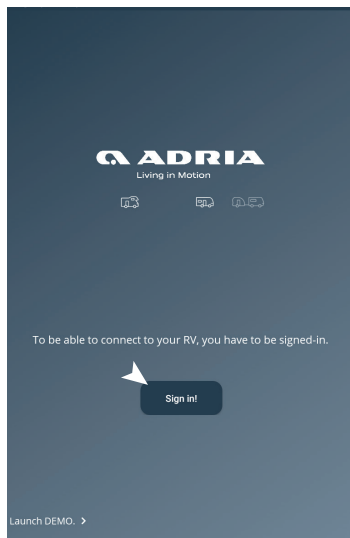

Your personal MACH QR code


On first use, create your account by pressing the “Register” button and filling and confirming all the fields of the registration form. After registering, you will receive an email with a confirmation link. Click on it and with that your account will be created. Now login into MACH via login screen.

More info available on www.adria-mobil.com/mach-app




*Available on Google play
and App Store.*

2 PAIR WITH YOUR ADRIA

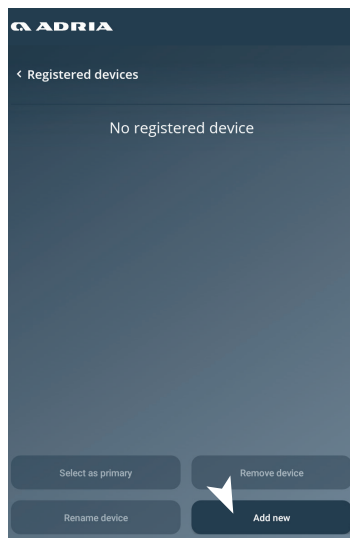

3 SELECT THE DEVICE

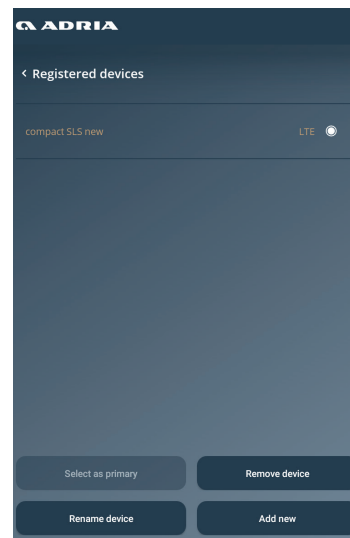




To link your Adria MACH to your vehicle you need to scan the provided QR code. Click on "Choose a different device" button on the initial screen. Then select the "Add new" button. Direct your phone camera at the provided QR code.

*"If you are the first user to link to the product, access is automatically granted and you become the vehicles' administrator. Otherwise, the vehicles' administrator will be asked to grant access to you via e-mail. You will be notified when access is granted and the device will appear in the **"Registered Devices"** screen in your MACH app.*

Select the device and click the back button.

The star next to the name of your device indicates the device MACH will automatically connect to. To select a new primary device click the circular check-box on the right of its name, then click **"Select as Primary"**.


4 GAS SENSOR PAIRING (Gas sensor optionally available at your Adria dealer.)

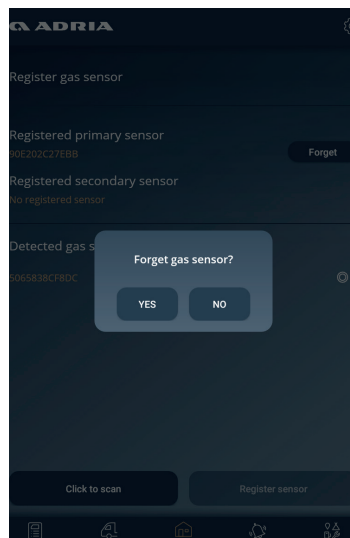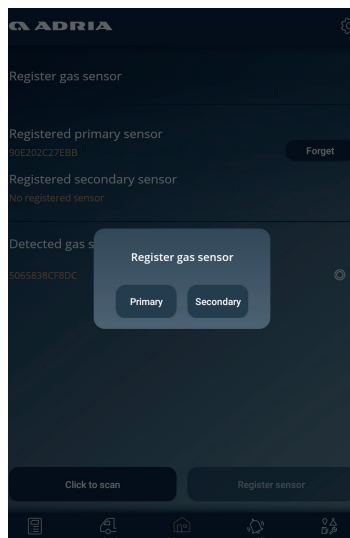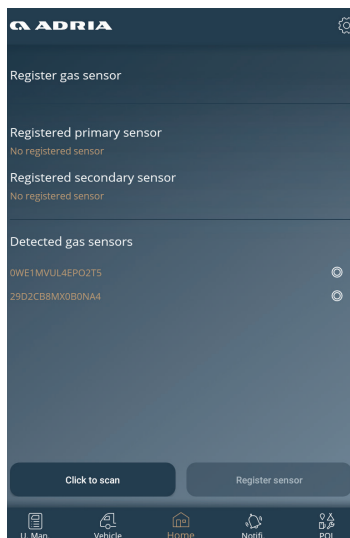

Each gas sensor needs to be paired and un-paired within the MACH app. You can pair up to two gas sensors, primary and secondary.

Go to “Register gas sensors” under Settings. In case no sensor is shown here, click on the “Click to scan” button. To connect to found sensor, hold the “Sync” button for at least 5 seconds. List of detected sensors will appear under “Detected gas sensors”. To pair with a sensor, select it and click on the “Register sensor” button. To unpair a sensor, click on it and then select the “Forget” button.

** If you only use one gas bottle, we recommend registering it as primary.*




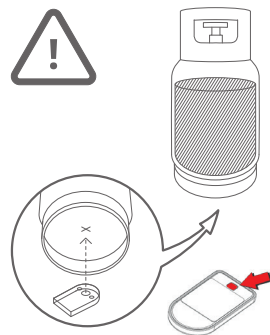


Attach the sensor to the bottom of the gas cylinder, as shown in the picture. Sensor attachment only works on magnetic metal gas cylinders. **WARNING:** Please remember to move the sensor to the new gas bottle upon changing.

For an easier, more comfortable life.

5* SIM CARD INSTALLATION

For MACH remote control or Wi-Fi hotspot functionality, you need to insert your own SIM card.

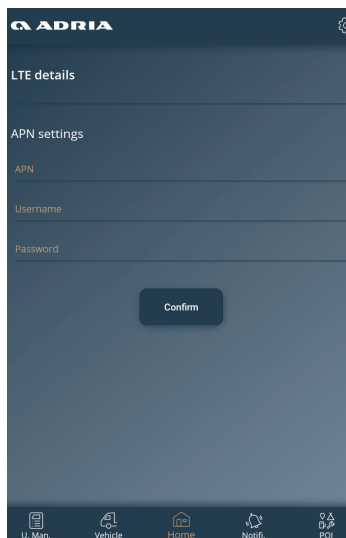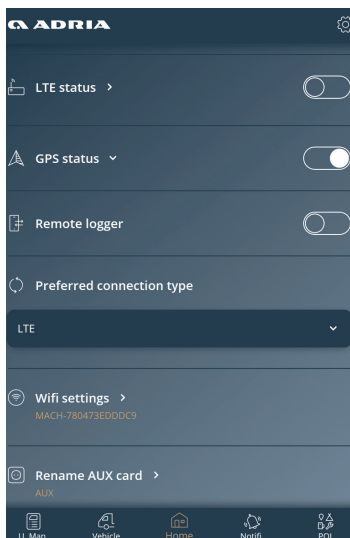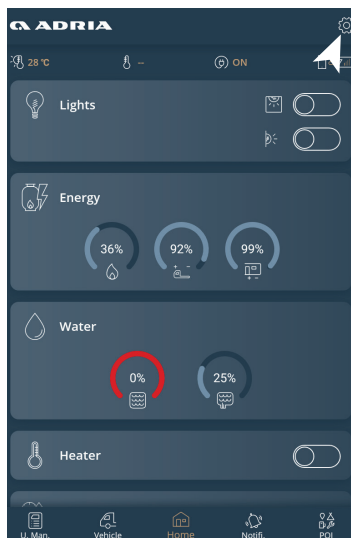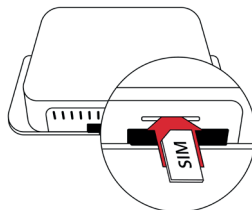

6 USERS MANAGEMENT

You can manage MACH users, connected to your Adria product through the Adria MACH web site (www.adria-mach.com). After the log-in, click on the product picture in the right top corner of the screen, and enter the "Manage Devices" area.

Users can be promoted to admins and current admins can be changed to users. You can also add and delete users. New users first need to go through the registration process.

In case there is no internet connection a minute after SIM card was inserted, you need to input your APN (Access Point Name) data manually in MACH application. Please note, this data is specific for each internet service provider.

* SIM card installation available only with MACH full version.



ADRIA MOBIL, d.o.o.

Straška cesta 50, 8000 Novo mesto, Slovenia
Tel. +386(0)7 393 71 00, Fax: +386(0)7 393 72 00
Email: info@adria-mobil.si, www.adria-mobil.com